


BLENDING NEW PAINT INTO EXISTING PAINT


1 PRIMER

After prepping the area, begin by applying the primer heaviest over the damaged area decreasing spray density as you move out and away from the scratched paint.

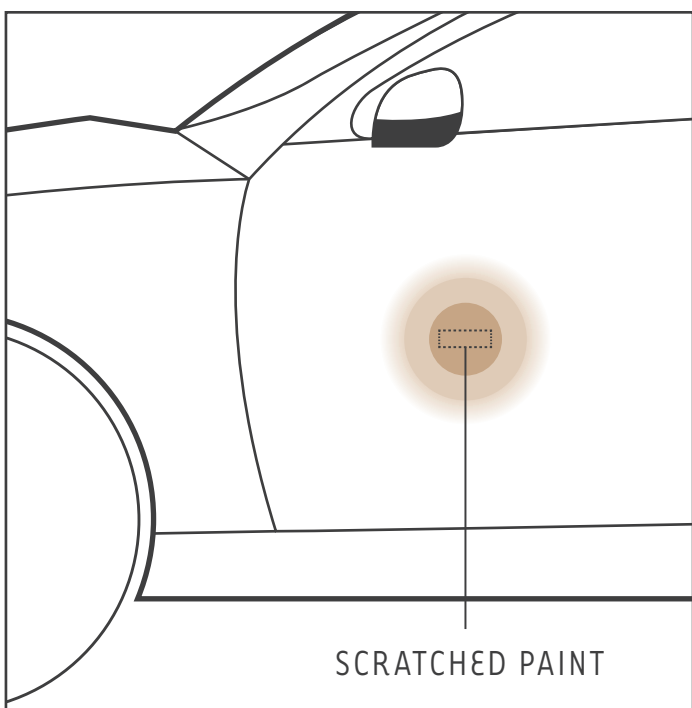

2 BASECOAT COLOR

Apply the base coat color heaviest over the now primed area decreasing spray density (with each coat) as you move out and away from the primed area.

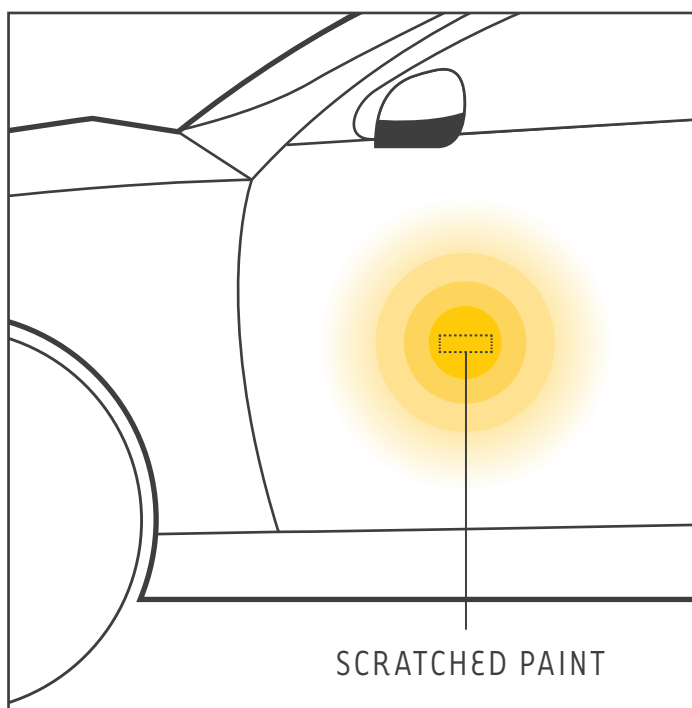

3 CLEARCOAT

Apply the clear coat heaviest over the base coat application decreasing spray density (with each coat) as you move out and away from the newly painted area.

